

MINI RGB LASER TYPEWRITER

ST-19

1.Keyboard function

F1: Static state mode and scroll mode for choice,static text's position can be controlled by left & right button,scroll text's scroll speed can be controlled by the up & down button.

F2: Color effects setting, like static state color,text mix color,flash and ect,can set the color's function.

F3: Text wavy effect setting,set the text wavy scroll speed by up & down button.

F4: Text gradually painting function,control it's speed by up & down button.

F5: Text scaling function, set the speed by the up & down button.

F6: Text horizontal movement,control the speed by the up & down button.

F7: Text vertical direction,

F8: Text horizontal rotation,

F9: Text Vertical rotation,

F10: Text 360 degree rotation,

F11: No use

F12: Set the text play number, 13 words,11 words,9 words,7 words, 5 words for choice.

ESC: Clear the F1-F12 function, revert to default state.

2. Text editing under keyboard

Delete single character (Backspace)

Delete the current buffer (Delete)

Delete the whole page (shift + Delete),

Back to the first functional segment (Home)

Back to the end of the paragraph (End)

Page Up (Up)

Page Down (Down)

4. Key combination function


Ctrl + S + number key is save the current page, number range 0-9

Ctrl + C + number key is calling current page, number range 0-9

Alt + S + number key is adjust the sound sensitivity, number range 0-9

Ctrl + WINDOWS is cycle through the main menu, use it to come to other menu.

5. Remote control (Infrared button R+B)

* Text play and automatic  By this key, can change the two models

First enter into the auto mode, if need effect state, please press number to enter.

* Sound control mode



By this key, can change the two kinds of sound mode.

Adjust the sound sensitivity:

First press “sound control mode” 2 seconds, then press number 0-9 to adjust the sound sensitivity.

* Common menu switch to remote control mode



Switch to the remote control mode: under the common menu mode, press the button 2 seconds to enter the remote control mode.

Switch to the remote control mode: under remote control mode, press the button **2 seconds** to enter the common menu.

Light close: Under the remote control mode, press the button, the laser can not output, press again to back to the before state.

* Color change



Under the text play, auto play, sound control mode, you can choose the current laser color by below:

The right button color change sequence: red – green – blue – red&green – red&blue – green&blue – red&green&blue – system

The left button color change sequence: red&green&blue – green&blue – red&blue – red&green – blue – green- red – system

* Stop play



Press the key to suspend, stop the program.

* Text, effects up on the turn



* Switch the mode to text editing




Enter the text editing mode, it's going the last page, if need specific page, press the Number directly.

* Text, effects down on the turn



* Number 0-9

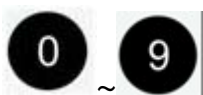

Number 0-9 key must used with other functions.

* Bit/Ten switch



* Direction switch



Press it can change the effects direction.(total 4 direction)

6. Panel key operation.

* Text editing、 play mode (R+B)

Under the editing mode, need connect the keyboard with PS2 input, press text and then save. Meantime,also can use remote control to save the last effects.

* Countdown mode (R+B)

Under the mode,need connect keyboard with PS2 input, Ctrl+number key to edit the data , by the key “Space” to operate the countdownfunciton.Under the mode,delete key is used to delete the countdown,.

* Auto mode (R)

* Soun control mode (B)

Note! Under the sound control, if not receive the sound signal after 10 minutes, laser will be off automatic.