

1. General instructions

Thank you for purchasing this product. Please read user guide for safety and operations information before using the product for better use and safety operation. Keep this manual for future reference. This product can create perfect laser programs and effects since it has passed a series of strictly tests before delivery.

Please handle with care after receiving the unit and check the attachments listed on the page after opening the carton. In the event of carton damage or attachment missing in transit, please contact your dealer or our after sales service department.

Attachments:

1. Laser Light
- 1PCS
2. Power Cable
- 1PCS
3. User Guide
- 1PCS

2. Notice:

1. Do not exposure the human eye direct to laser beam.
2. Do not turn on and off the unit frequently.
3. Before using this unit make sure the power supply is ground.
4. This unit is intended for indoor use only and should be prevented form water, moisture and shake. The working temperature of this unit is 18~30℃, do not use this continuously over 4 hours, otherwise it shortens the lifetime of the unit.
5. Use cleaning tissue to remove the dust absorbed on the external lenses periodically to optimize light output.
6. Do not remove or break the warranty label, otherwise it void the warranty.
7. Always replace with the exact same type fuse, replacement with anything other than the specified fuse can cause fire or electric shock and damage your unit, and will void your manufactures warranty.



This product installation operation and maintenance should be by professional.



 
Warning! Do not exposure the human eye direct to laser beam.

3. Installation

1. Before installation, please make sure power voltage is proper as the one marked on the unit.
2. This product should be installed by professional to make sure it is fixed safely and have adjusted suitable shining angel.
3. When installing this unit, please make sure there is nothing flammable or explosive 0.5 meter near the unit. Make


sure there is 15 mm distance between the unit and the wall. Please make sure to use safety rope which can support tenfold weight of the unit to assist fitting.

4. Front Panel

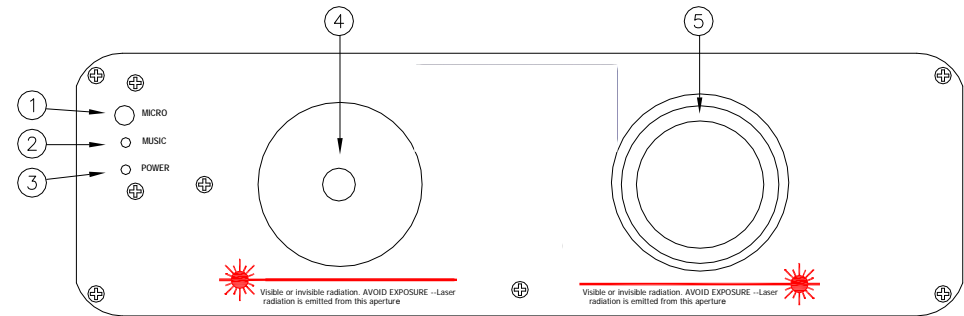

1. Sound Active Microphone
2. Sound Active Indicator
3. Power Indicator
4. Laser Aperture
5. Led Aperture

 5. Rear Panel

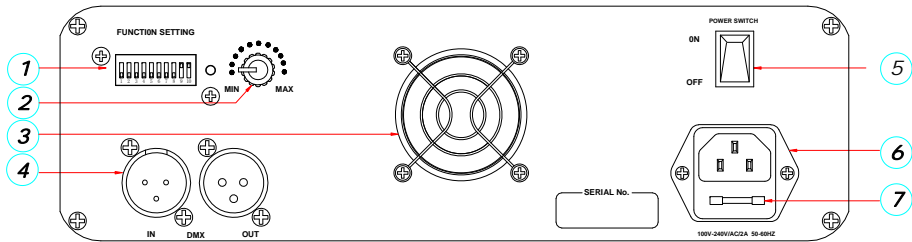

ON	Name	Function
1	Address Code On/ Off	Address code selection
2	Sound Active Knob	Sensitivity Adjustment
3	Fan	Disperse heat to avoid damage of the unit
4	DMX Connector	Input/ Output signal connection

Laser Show System

5	Power supply switch	Turn on/ off the unit
6	Power supply	Power input connector
7	Fuse	Safety function

6. Function Setting

Dipswitches #10 are use to set 4 working modes as Sound active, Automatic, Slave/Master and DMX mode. DMX mode have DMX control channel address for setting, Namely DMX Address, see the function setting chart. When dipswitch 10# selected ON, Function of #1~#9 as below: 0=OFF 1=ON X=OFF or ON

DIPSWITCH CHART										FUNCTION
#1	#2	#3	#4	#5	#6	#7	#8	#9	#10	
X	X	X	X	X	X	X	X	0	1	SOUND ACTIVE
X	X	X	X	X	X	X	X	1	1	AUTO MODE
SET DMX ADDRESS									0	DMX/SLAVE

7. Stand-Alone Operation (Sound Active, AUTO mode)

1. Set dipswitch to select Sound Active or AUTO mode.
2. The unit will react to the low frequencies of music via the internal microphone. Adjust the audio sensitivity knob on the back of the unit to make the unit more or less sensitive in sound active.

 
8. Master-Slave Operation

1. Choose a unit to function as Master mode, set dipswitch to select Sound Active or AUTO mode. The others must be set to Slave mode, set dipswitch to select Slave mode.
2. Use standard XLR microphone cable chain your units together via the XLR connector on the rear of the units. For longer cable runs we suggest a terminator at the last fixture.
3. Turn on the all units' power, the units begins reset, then the unit begins working. The slave units will react the same as the master unit.

Master/Slave mode no need DMX controlled, There should be only one master unit in Master-Slave operation. For working time of slave and the master unit should at the same time, we suggest Master and Slave unit run from one power switch.

9. Master-Slave Connection

Laser Show System

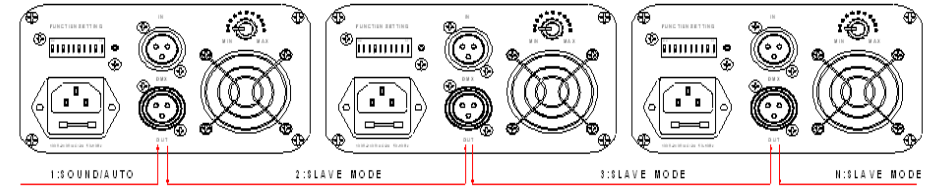

10. DMX Control Setting

Channel	Function	Value	Description
1	Mode	0~63	Cut off
		64~127	Automatic
		128~191	Sound active
		192~255	DMX pattern
2	Step rotate speed	0~255	Form slow to fast
3	Step rotate direction	0~84	Counterclockwise
		85~169	Stop
		170~255	Clockwise
4	Line size	0~255	Form short to long
5、6	Color select	0~24	Green and Red
		25~49	Green
		50~74	Red
		75~99	Red off , Green shining
		100~124	Green off , Red shining
		125~149	Red on , Green shining
		150~174	Green on , Red shining
		175~199	Green and Red shining together
		200~255	Green and Red shining one by one
7	LED rotate speed	0~255	Form slow to fast
8	LED rotate direction	0~169	Clockwise
		170~255	Counterclockwise


11. Troubleshooting

- 1. In Stand-Alone operation, if the power supply indicator is light up and sound active indicator isn't light up, but the laser is shut off doesn't work, Please check if unit has been set up in slave mode, then set up in master mode.
- 2. In Master-Slave operation, slave unit don't function, please check as below.
 - A. Make sure to there's only one master in the chain, and the others are set in slave mode.
 - B. Make sure to control the unit without DMX console controlling.
 - C. Make sure to take a good quality power cable and connection.
- 3. In DMX mode operation, the laser is OFF and the DMX signal indicator is unlighted, please check as below
Make sure to set up the DMX mode, make sure to have a good connection.
- 4. In DMX operation, the unit can't be controlled by the DMX console, but the DMX signal indicator is flashing, please make sure the DMX console and unit have the same channel.
- 5. If the unit is fail, please turn off the unit, then turn on again after 5 minutes.
- After trying the above solution you still have a problem, please contact your dealer or our company for service.

Trouble manifestation	Trouble shooting
If the power supply indicator does not light up and laser does not work	Please check the power supply and the input voltage
If the sound active indicator isn't light up with music active	Please increase the music volume or audio sensitivity with sensitivity knob
In Automatic mode operation, if power supply indicator is light up, but laser light is not light up	Please check if any trouble with laser machinery
If the laser beam is at rest in working mode	Product problem
After trying the above solution you still have a problem, please contact your dealer or our company for service	

12. Universal DMX Operation (DMX mode)

 The System only accepts the DMX512 signal of international standard to control the system mode, the laser beam ON/OFF, running direction, running speed and twinkle speed etc.

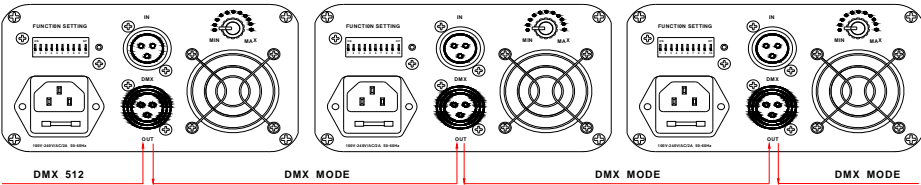

13. Technical Parameter

Item	T-808
Spec	
Light	Laser : Red/Green /Blue LED : Blue Green Red
Power	Laser : Red: 100mW Green: 50mW Blue: 100 mW LED : Blue 1W Green 1W Red 1W
Dimension	270*175*80mm
Net Weight	1.5kg
Demo Effect	RGY laser dots are controlled by the movement track and speed to create more millions of laser dots by impinging against to each other looks like the fireworks effect with seven diffrent LED background
Scan System	High speed step motor drive and grating scan
System Port	DMX512 input and output port
Control Mode	Sound Active, Automatic,DMX512(8channels) Master/Slave
Work environment	10-35℃ Indoor
Power Supply	AC240V 50-60Hz 20W
Work Place	Disco, KTV room, Bars, Clubs, Family party etc.